


- 1) LOCK CASTER BRAKE AND INSTALL CASTER STUDS INTO THREADED INSERT IN STAND
- 2) INSTALL STAND TO CHASSIS WITH 10-32 HARDWARE PROVIDED

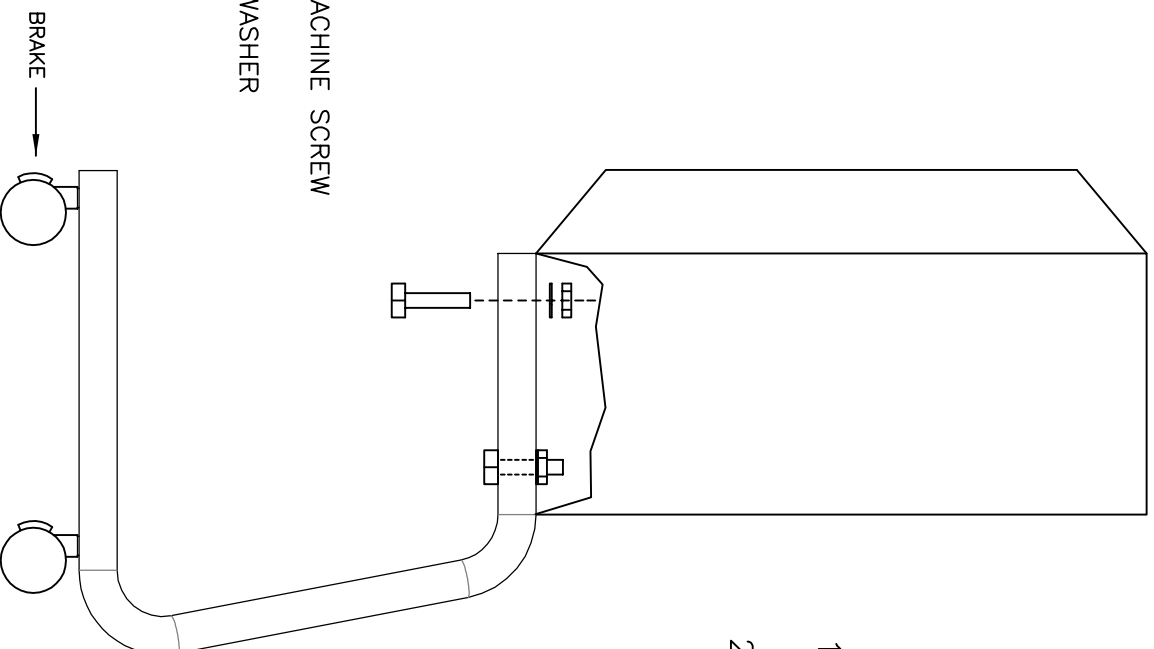

- HARDWARE:
- (QTY-4) 10-32 X 2.5" MACHINE SCREW
 - (QTY-4) 10-32 HEX NUT
 - (QTY-4) #10 SPLIT LOCKWASHER

10/25/12	RELEASED		A
DATE	DESCRIPTION		REV
ATHENA®			
TITLE BEDROS STAND ASSY			
DWG NO. BEDSTDASSY-1			
DATE	SCALE	DRAWN	CHECKED
10-25-12	___	MSM	BC